



Please use this step-by-step guide for adjusting the temperature in your residence hall room.

REGULATING YOUR ROOM'S TEMPERATURE



You can regulate the temperature in your residence hall room by trying the following things:

- Adjusting the thermostat to heat or cool.
- Adjusting the speed and temperature.
- Be sure not to block the vent on the counter top where the air comes out.
- If you have not been able to successfully regulate your room's temperature you may place an online work request.

BROMLEY HALL OLD HVAC SYSTEM

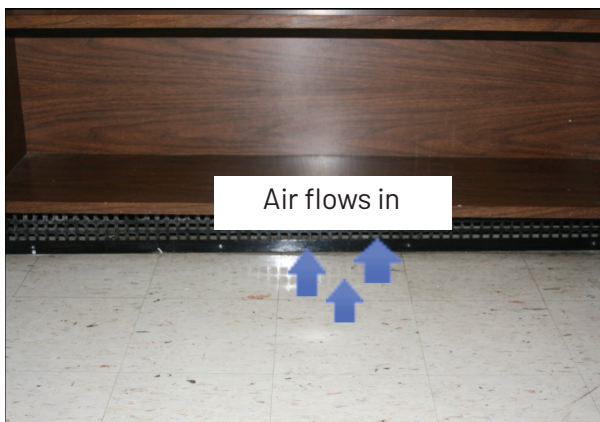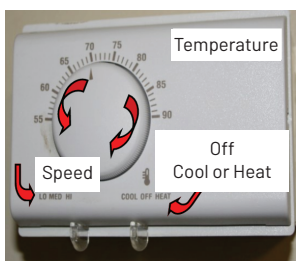

BROMLEY HALL NEW HVAC SYSTEM

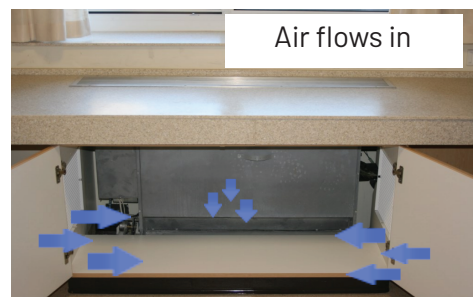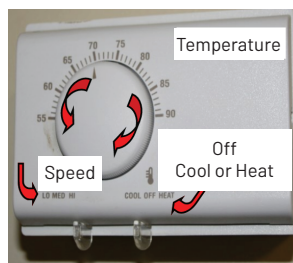

DO NOT USE THIS AREA FOR STORAGE. IF THE AIR CANNOT CIRCULATE, YOUR ROOM MAY NOT REACH THE DESIRED TEMPERATURE.

