

NEW OR RENOVATED HALLS

www.ohio.edu/facilities/requests

Please use this step-by-step guide for adjusting the temperature in your residence hall room.

REGULATING YOUR ROOMS TEMPERATURE


New and renovated residence halls are heated and cooled by a system that controls the whole building. If you are in this style of residence hall, you will see a thermostat on the wall of your room that can be *seasonally* adjusted. For example, during the summer months, you can adjust the temperature up or down a bit but you *cannot* turn on the heat. During the winter months, you can adjust the temperature up or down a bit but *not* turn on the air conditioning.

If your HVAC system has stopped working you may place an online work request to have the system repaired.



To adjust the set point (temperature) in your room, you must:

- press the "set point" button
- adjust the temperature
- once you have the desired temperature displayed on the digital screen, press the "set point" button again to adjust the temperature.

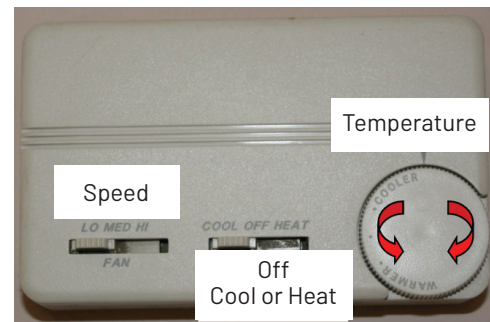

EAST GREEN:

BIDDLE	LINCOLN
BUSH	READ
JOHNSON	SHIVELY

SOUTH:

ADAMS

