

FRONT FOUR

www.ohio.edu/facilities/requests


Please use this step-by-step guide for adjusting the temperature in your residence hall room.

STEP BY STEP

You can regulate the temperature in your residence hall room by trying the following things:

- To receive maximum heat, items should remain 12"-24" away from the heater
- See if the damper works on heater unit & adjust. (some dampers can be opened/closed)
- If damper is inoperable or you are still too warm, you may use items such as towels, bedding, or move furniture to obstruct the air flow to the unit.
- Add & subtract items to restrict or allow air flow.
- Or, draw in cool outside air by running the fan/vent on the window A/C unit.

FRONT FOUR WALL HEATER

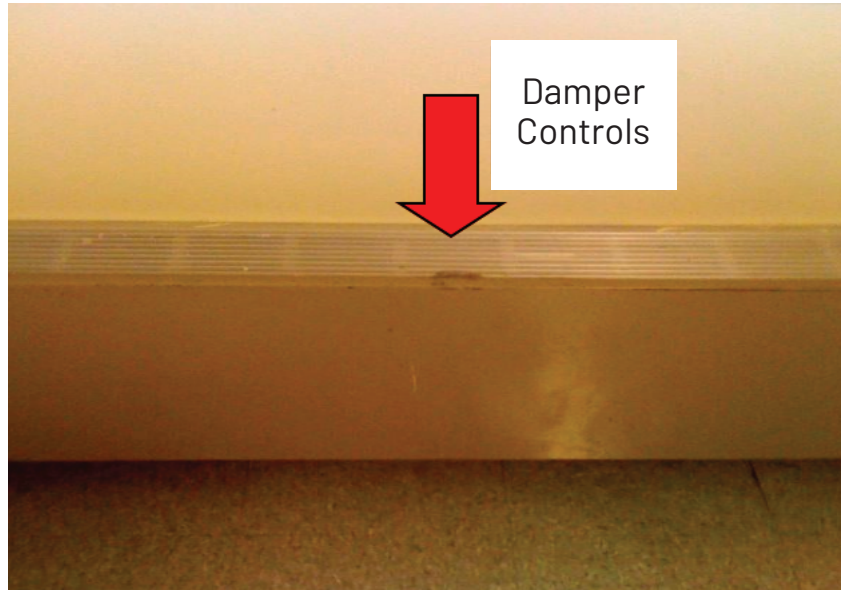

HAVING TROUBLE WITH YOUR A/C?

Your window A/C unit may freeze up if used during extreme outside temperatures. If you are having trouble:

- Thaw the unit by turning it off & waiting 2-3 hours.
- A/C unit is not meant to be used when outdoor temperatures are below 50 °. This could result in burning up the unit.

SOUTH GREEN:

BROWN
CRAWFORD

MACKINNON
PICKERING

WINDOW A/C CONTROL PANEL OPERATION



BASIC FUNCTIONS



UP and DOWN: Changes the system's set point (desired room temperature). Press once to change 1 degree at a time or hold down to change at a faster pace.



FAN SPEED: Allows you to select between four fan speeds (*auto selects fan speed needed to satisfy desired set point)



FAN MODE: Allows you to select between 'auto fan' and continuous modes

AUTOFAN: Fan cycles on or off with compressor
CONTINUOUS: Fan operates all the time